




# 1

## Kit 187107

VOLKSWAGEN California, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Caravelle, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Multivan, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Shuttle, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Transporter, 4-dr Double cab, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Transporter, 4-dr Van, (T5) 03-15, (T6) 15-



ISO 11154-E

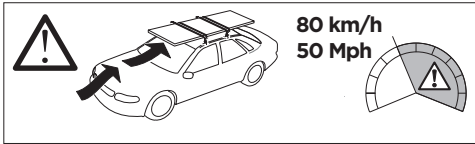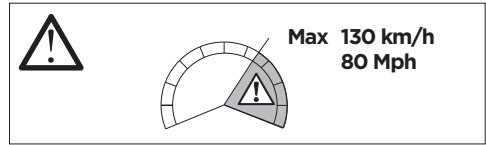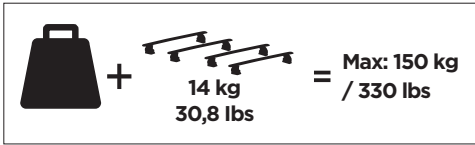

This kit is only for vehicles with fixpoint mounting.

062 x2

M6x53 mm  
54704 x2

Safety

116 x2

004 x4

5 mm  
30113 x1

M6x69 mm  
54704 x2

Safety

### Kit 187001

062 x4

004 x4

5 mm  
30113 x1


M6x53 mm  
54704 x4

760 x2


Bring your life  
 thule.com



## Short Wheelbase

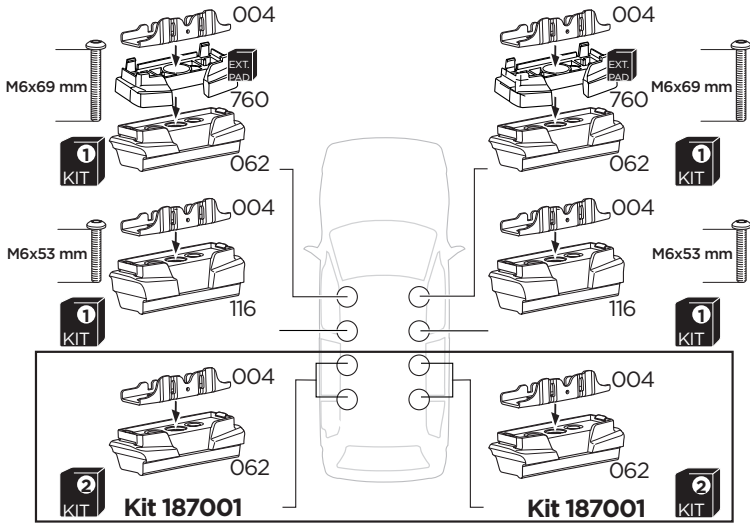

## Long Wheelbase

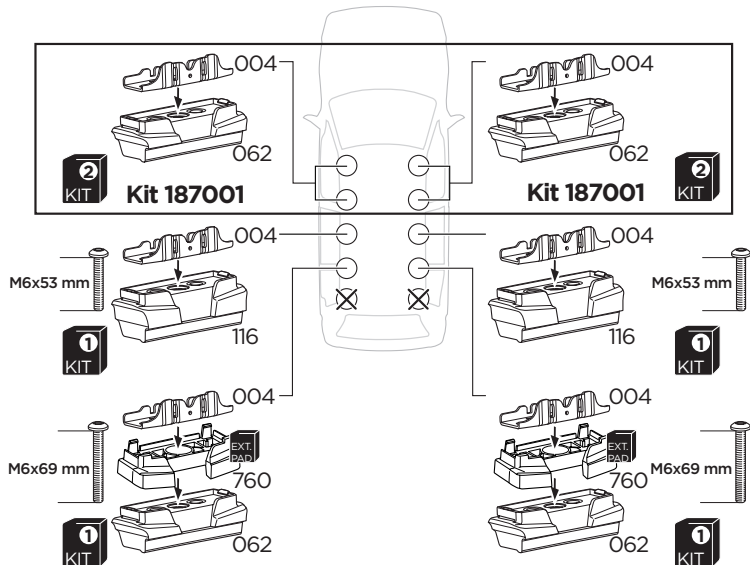


# Short Wheelbase




1

A

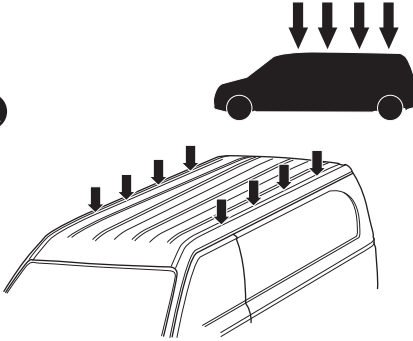


B

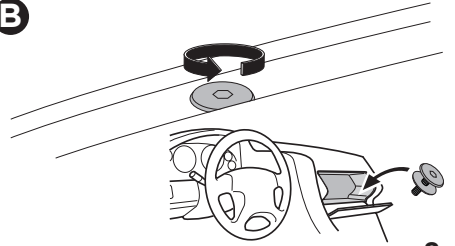


x8

C

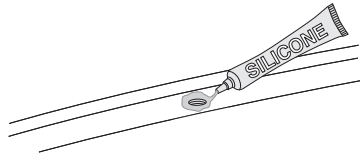


x8


2

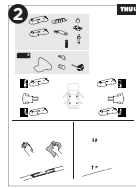


Kit 187001

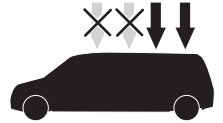


3







8 Nm

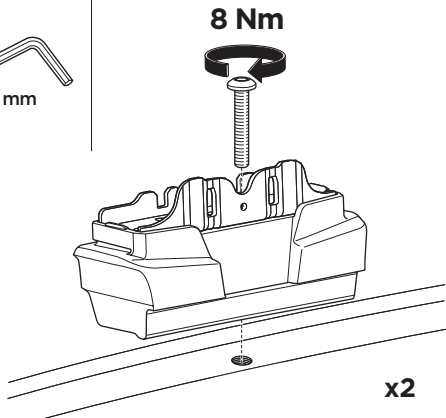

x2

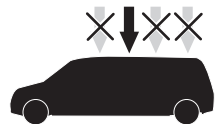


4

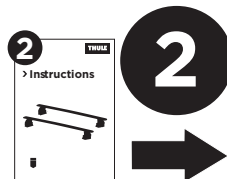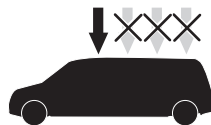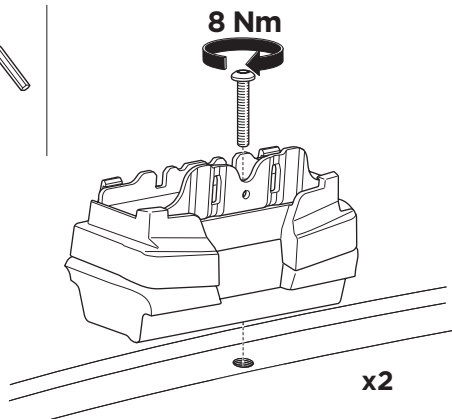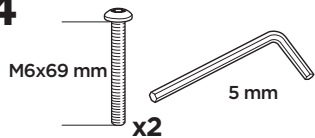


i

A

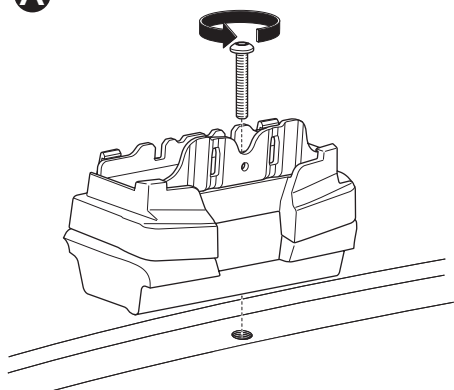

B

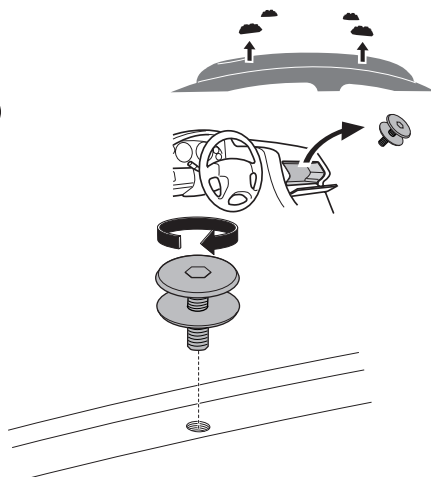


# Long Wheelbase




1


A

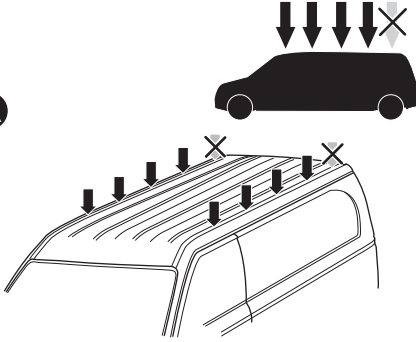


B

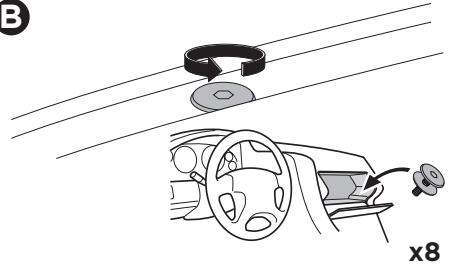


C

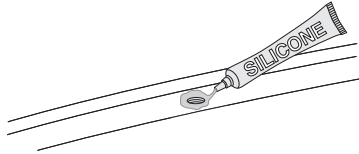


2

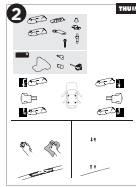



Kit 187001

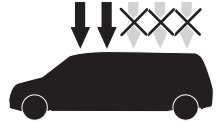





3



8 Nm

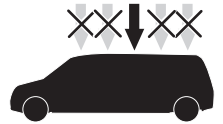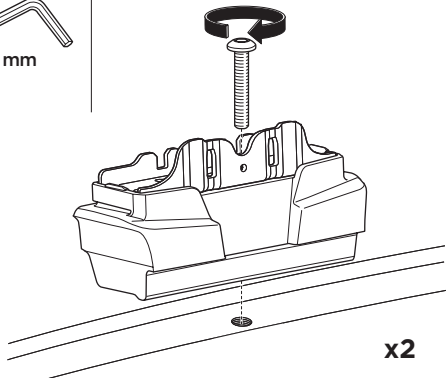


4

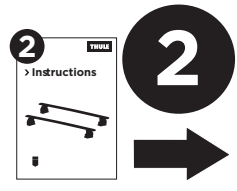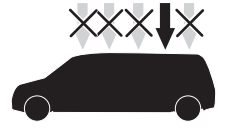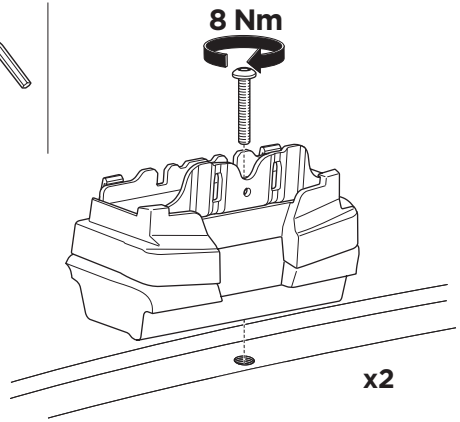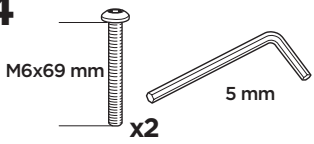


i

A

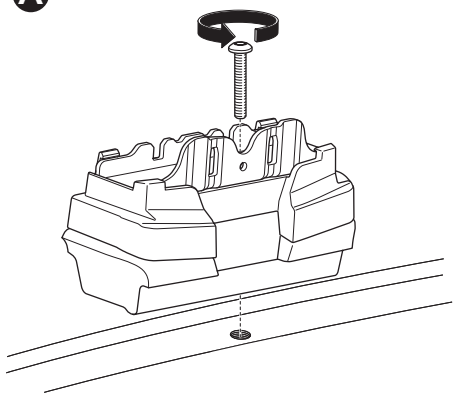

B

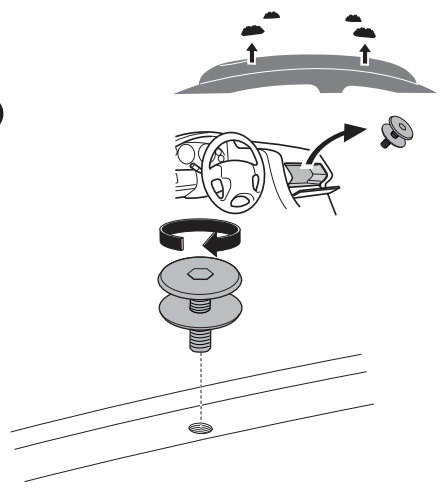



 Thule Sweden AB, Borggatan 5  
335 73 Hillerstorp, SWEDEN

› PART OF THULE GROUP

 [info@thule.com](mailto:info@thule.com)

© Thule Group 2022. All rights reserved.

 [www.thule.com](http://www.thule.com)

5562047002