


CT23FT22

Fiat 500X 2015>
Max Depth 145mm



Remove the plastic panel from below the radio using a panel removal tool.

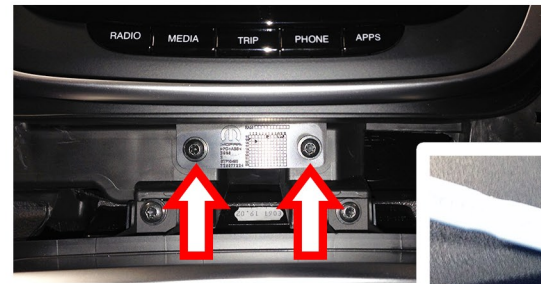

Remove the two screws from below the stereo and then unclip the surrounding panel.



Remove four highlighted screws and remove the OEM head unit.



Fit Brackets to aftermarket radio and fit radio into the dashboard.

Fit the fascia plate as shown using the original car screws.



Reassemble the OEM dashboard in reverse order.